

### **Extending the Belt:**

- 1) Raise and twist locking "L-pin" on the top of the unit
- 2) Pull the belt to desired location and slide end into receiving clip
- 3) Turn the handle clockwise to put enough tension on the belt to hold the belt straight
- 4) Twist to release the locking "L-pin" into the alignment hole

### **Retracting the Belt:**

- 1) Lift the belt end from the receiver clip, continuing to hold the belt end
- 2) Walk back towards the main housing while collecting the belt in your arms
- 3) Raise and twist the locking "L-pin" on top of the unit
- 4) Turn the handle clockwise to wind the belt into the unit. Use one hand to guide the belt through the slot with slight tension, while turning the handle with the opposite hand.
- 5) When the belt is fully retracted, twist to release the locking "L-pin" into the alignment hole

**Note:** Do not drag the belt along the ground. This will cause dirt and debris to contaminate the belt, and mechanism will void manufacturer's warranty.



Model # WM5000